



SETTING PUSH BUTTONS

1. Expose locking screw by removing push button.
2. Loosen locking screw about one full turn.
3. With locking screw loose, and button depressed, tune in desired station accurately.
4. Tighten screw and replace moulded cap.

DO NOT LOOSEN screw more than 4 turns. Screw may come out and may be hard to replace.


ALIGNMENT FREQUENCIES

I.F. FREQUENCY: 455 KC


ALIGN "B" BAND FIRST

BAND FREQUENCY

B	6.6MC
A	1400KC & 560KC
C	9.8MC
D	11.7MC
E	15.7MC
F	24.0MC

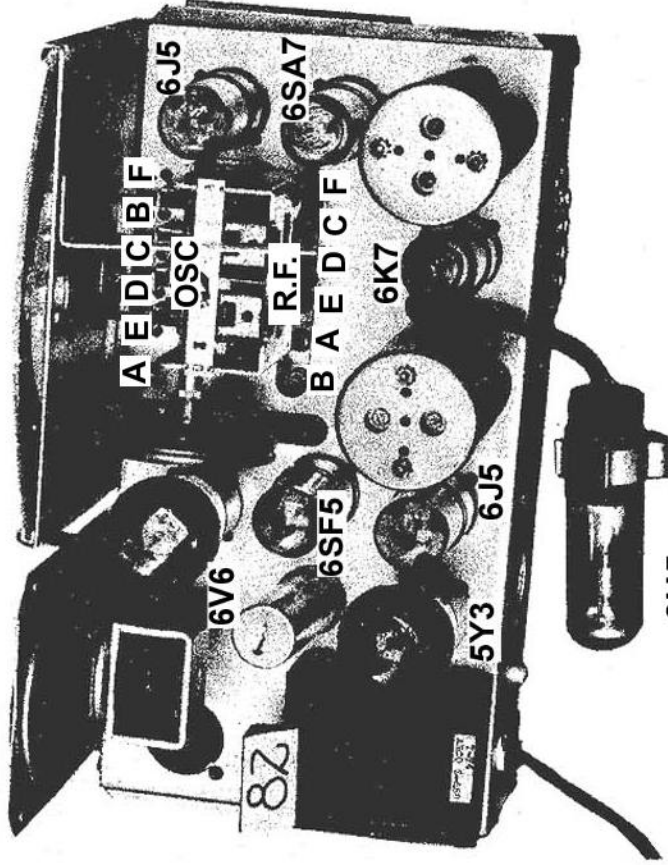


TIE CORD ENDS TO HOLE IN PULLY →

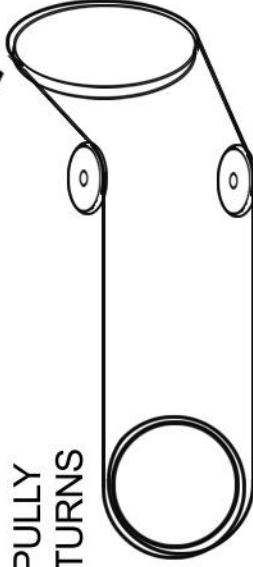

DIAL PULLY 1-1/2 TURNS

TUNING CAPACITOR INNER PULLY

USE THIN DIAL CORD BOTH PLACES

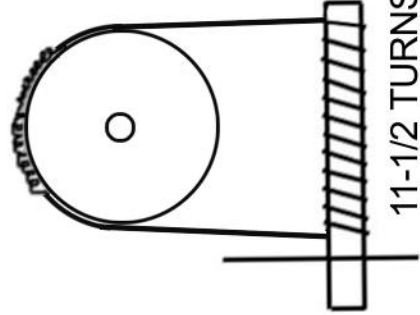

FRONT OF CHASSIS

11-1/2 TURNS SPACED APART

MIDWEST  
CHASSIS 82 (8 Tube, 1942)  
Revised July 3, 2022  
*Wilec Simpson*